


Assembly instructions

SPORT-EVOLUTION

Sport-Evolution Franzen GmbH
Dachspfad 17
56566 Neuwied
Tel.: 02622-922 72-0
info@sport-evolution.de
www.sport-evolution.de

SE-51-13648-00-000 rigid footrest

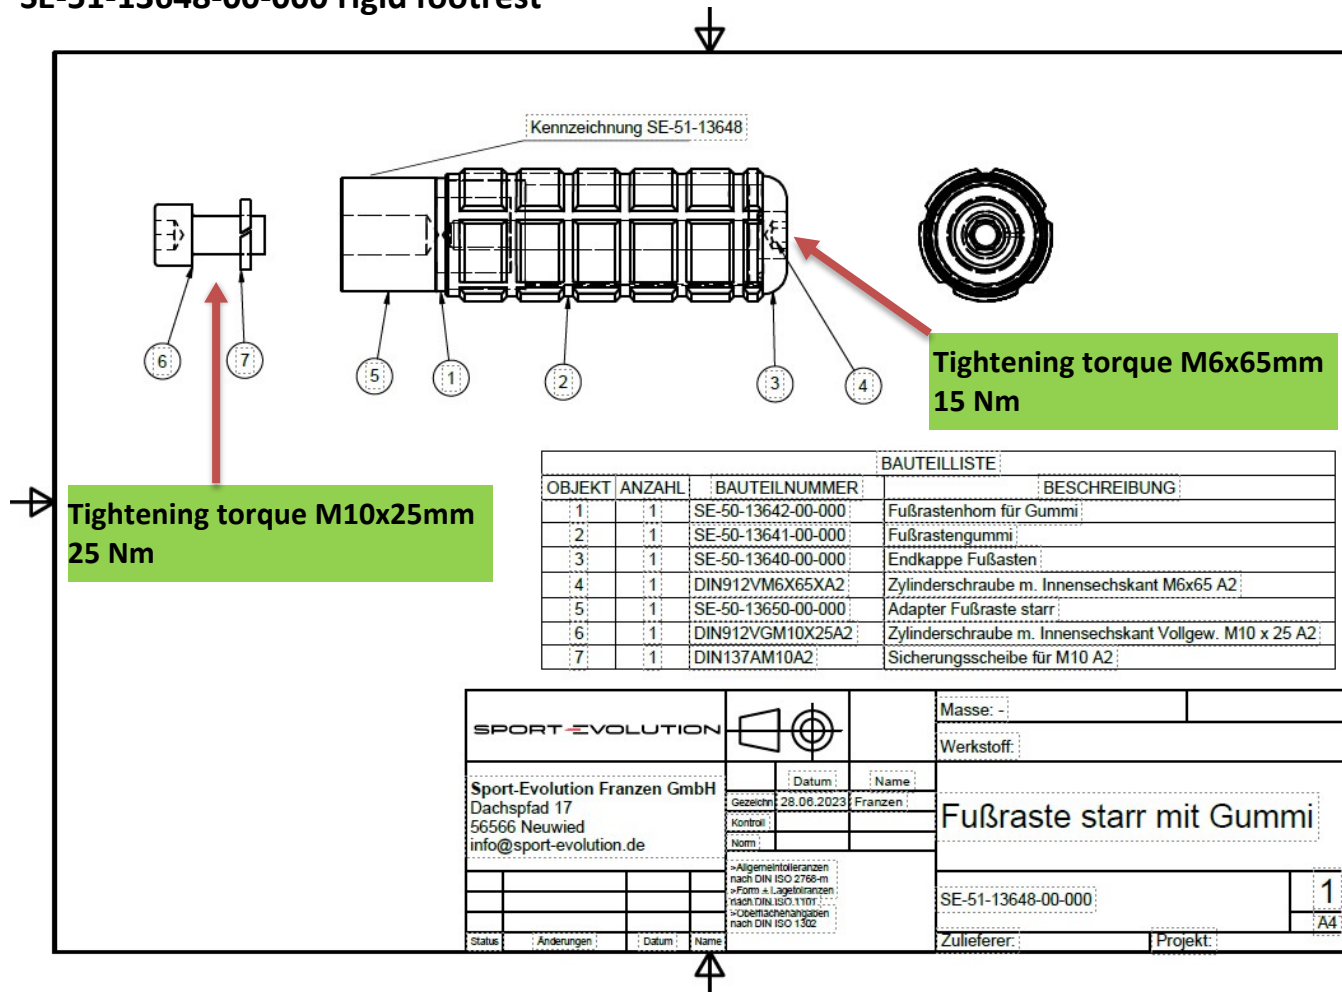

Caution:
Retighten all screw connections after approx. 50 km using the specified torque.

Please proceed with caution. Improper installation can lead to serious accidents and damage to the vehicle. Please note that we cannot accept any liability for vehicle-specific tolerances. In individual cases, it may be necessary to adapt our product. Please only allow qualified personnel to work on safety-related components (e.g. brakes, wheels, cables, chassis). These installation instructions have been compiled to the best of our knowledge, but all information is provided without guarantee. We recommend regularly checking all unsecured screws and tightening them if necessary. Ensure that your handlebars and wheels are free to move at all times.